



All carburetor engines except 110

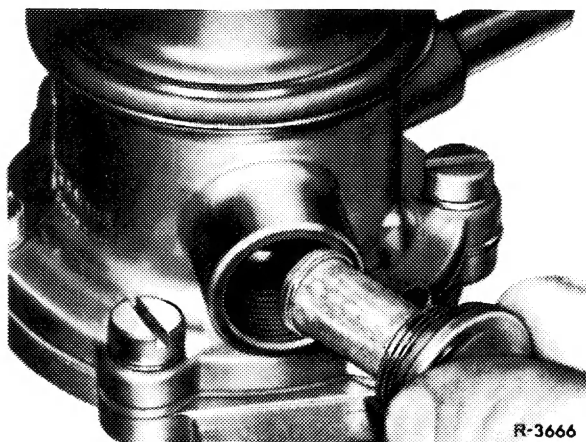

#### Lever type pump

- Take out fuel strainer and clean.
- Install plug using new gasket.
- Check sealing.

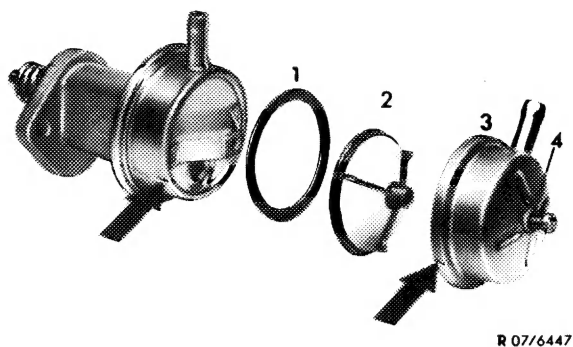

#### Plunger type pump

- Remove cover (3).
- Renew fuel strainer (2), rubber gasket (1), aluminum seal (4), and cylindrical head screw. The parts are available as a repair kit.
- Check sealing.